


LIGHTHOUSE STANDARD

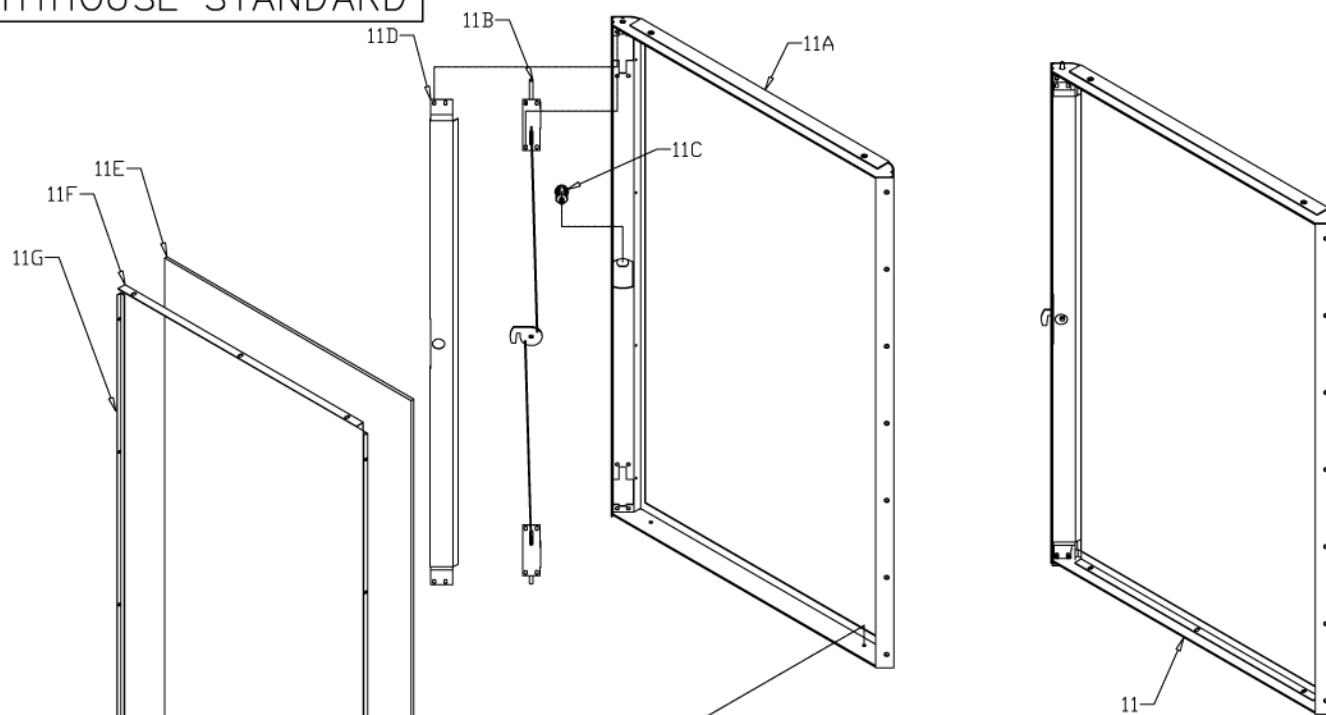

NO	PART NO	DESCRIPTION	QTY
11	LH1 A001	FRONT DOOR ASSEMBLY	1
SUB ASSY	11A	LH1-SA-23-R1 DOOR FRAME METAL ONLY	1
	11B	LH1 A001a TRIPLE LOCK ASSEMBLY	1
	11C	HM0004 LOCK ANGLE	1
	11D	LH1-FM-34-RO TRIPLE LOCK COVER	1
	11E	HM1916 FRONT GLASS	1
	11F	LH1-FM-16-RO FRONT GLASS RETAINER	2
	11G	LH1-FM-32-RO SIDE FRONT GLASS RETAINER	2
	-	AT2955 STICKER PLAY INSTRUCTION	1
PART ITEM	02A	LH1 A002a COINDOOR DOUBLE SLOT ASSY	1
	02A1	HM0004 LOCK ANGLE	1
	02A2	LH1-FM-53-RO THANDLE COVER	1
	02A3	LH1-SA-11A-RO COINDOOR DOUBLE SLOT METAL ONLY	1
	02A4	HA0014 COIN MECHANISM	2
	02A5	EA0520 SWITCH SMALL ROUND GREEN BUTTON	1
	02A6	EA0519 SWITCH SMALL ROUND RED BUTTON	1
	-	LH1 H003 COINDOOR DOUBLE SLOT HARNESS	1
PART ITEM	02B	LH1 A002b COINDOOR 1 DBA 1 SLOT ASSY	1
	02B1	HM0004 LOCK ANGLE	1
	02B2	LH1-FM-53-RO THANDLE COVER	1
	02B3	LH1-SA-11B-RO COIN DOOR DBA METAL ONLY	1
	02B4	- DOLLAR BILL ACCEPTOR	1
	02B5	HA0014 COIN MECHANISM	1
	02B6	EA0520 SWITCH SMALL ROUND GREEN BUTTON	1
	02B7	EA0519 SWITCH SMALL ROUND RED BUTTON	1
	-	LH1 H002 COINDOOR 1 DBA 1 SLOT HARNESS	1

OPTIONAL SECURITY PARTS

-	LH1-FM-61-RO	COIN DOOR COVER	1
-	LH1-FM-63-RO	DBA COVER	1
-	LH1-FM-46-RO	COVER FRONT DOOR	1
-	LH1-FM-45-R1	SAFETY COVER COIN DOOR	1

