


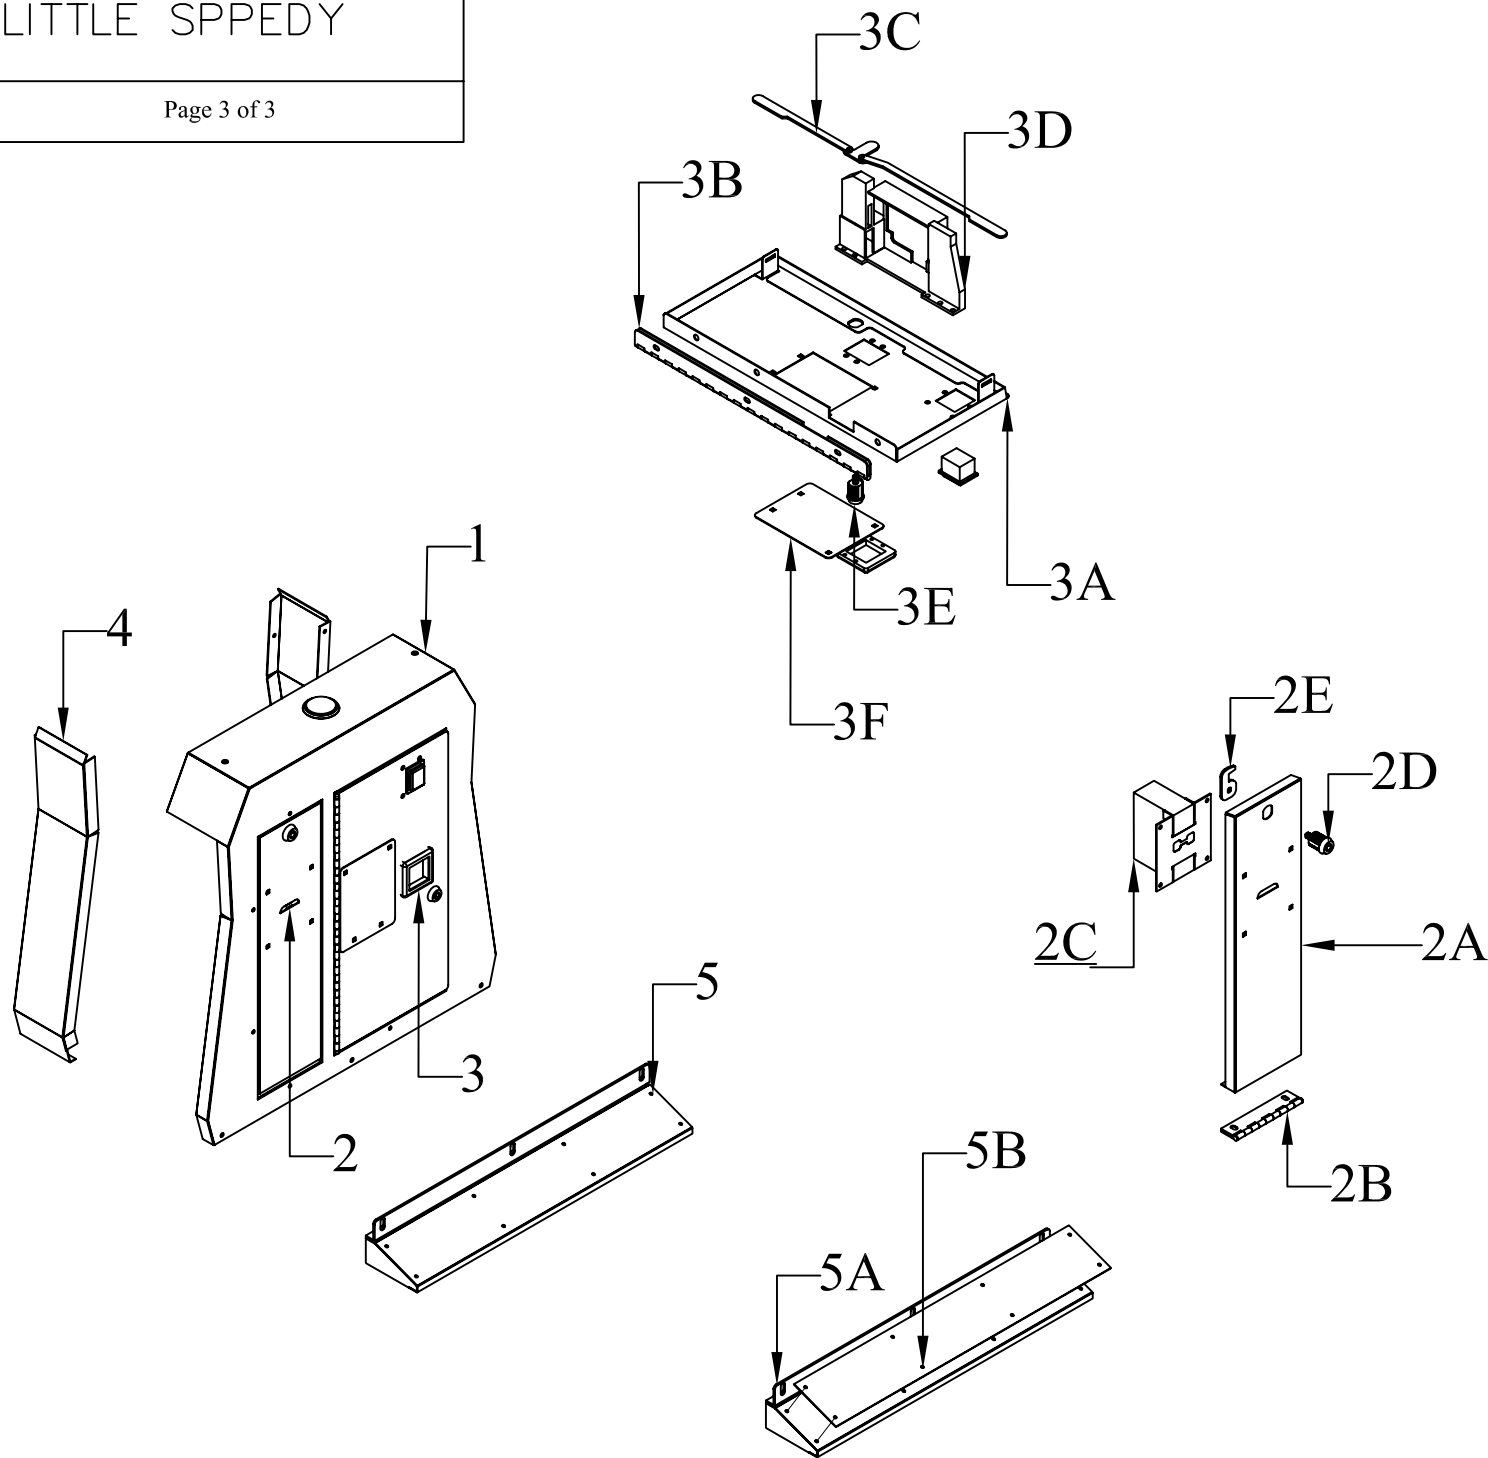

No		No. Part	Description	Qty
1	1A	LS1-SA-01-R0	Front Cabinet SA	1 Pc
	1B	EA0547A	Button Ø60 RED	1 Pc
	1C	BA2601	Seven Segment 1" (Display Credit)	1 Pc
	1D	LS1-FP-09-R0	Acrylic Intruction	1 Pc
2	2A	LS1-FM-24-R0	Ticket Door	1 Pc
	2B	LS1-FM-20-R0	Ticket Door Hinge (Part-2)	1 Pc
	2C	EA1103	Ticket Dispenser	1 Pc
	2D	HM0004	Lock Angel	1 Pc
	2E	LS1-FM-13-R0	Lock Cam (Part-4)	1 Pc
3	3A	LS1-FM-05-R0	Coin Door	1 Pc
	3B	LS1-FM-20-R0	Coin Door Hinge (Part-1)	1 Pc
	3C	LS1-FM-13-R0	Lock Cam (Part-1,2,3)	1A/1B/1C
	3D	HA0014A	Coin Mechanism	1 Pc
	3E	HM0004	Lock Angel	1 Pc
	3F	LS1-FM-18-R0	DBA Cover	1 Pc
4		LS1-FM-02-R0	Bracket Continues	1 Pc
5	5A	LS1-FM-30-R0	Kick Plate	1 Pc
	5B	LS1-FM-14-R0	Cover Kick Plate	1 Pc